

PR799 2 PLY FACE COVERING 5 PACK

WASHABLE AND REUSABLE ANTIMICROBIAL & WATER-REPELLENT

95% COTTON, 5% ELASTANE



PR799: WASHABLE FABRIC FACE COVERING 5 PACK

- 2 Layers of single jersey fabric, with inner loop option for fit adjustment.
- Silvadur^{†M} 930 Antimicrobial finish on outer which inhibits the growth of microbes to offer protection, durability and freshness.
- Zelan™ R3 water repellent finish on outer fabric layer.
- Shaped fabric face covering.
- One size fits all.
- L 27cms X W 12cms
- Soft cotton fabric that is designed to be worn over ears to keep in place and fit close to the face.
- Washable to 60 degrees, so can be reused.

FABRIC:

95% cotton 5% elastane, single jersey with antimicrobial and water repellent finish, 160gsm

COLOURS:

Black, White, Navy, Dark Grey, Red, Royal

QTY:

5 Pieces per selling unit





Double layer fabric face covering, non medical and ideal for general workplace use. Fabric binding allows the product to be washed and reused again, the outer layer has Silvadur™ 930 Flex Antimicrobial finish with a Zelan™ R3 renewably sourced, durable water-repellent finish.

FACTORY CERTIFICATIONS:










ANTIMICROBIAL FINISH ON OUTER FABRIC LAYER

 Silvadur[™] 930 Antimicrobial finish on outer which inhibits the growth of microbes to offer protection, durability and freshness. https://www.dupont.com/products/silvadur930antimicrobial.html

Zelan™ R3 finish on outer fabric layer, renewably sourced, durable water-repellent finish.
http://www.huntsman.com/textile_effects/a/Solutions/Product%20Highlights/Chemicals/Zelan%20R3

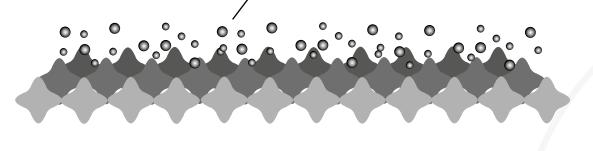

OUTER FABRIC LAYER WITH FINISH




INNER LAYER

FABRIC: 95% cotton 5% elastane, single jersey 160gsm

DIMENSIONS

C: 27 cm x D: 12 cm

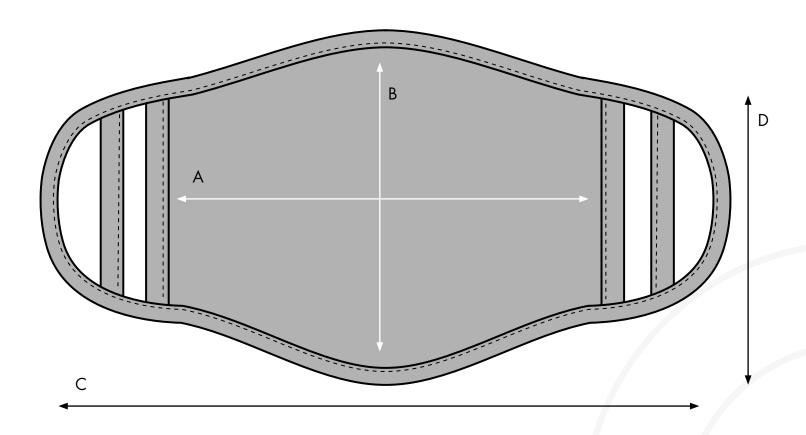

PRINT AREA

A: 16 cm x B: 10 cm



PACKAGING

SELLING UNIT: contains 5 face coverings

PACK: contains 10 selling units = 50 face coverings

CARTON: contains 20 packs / 200 selling units = 1000 face coverings

Carton dimensions: 30cm * 26cm * 50cm Carton weight: 6kg (approx)

STICKER AND CARE INSTRUCTIONS





DISCLAIMER: The Premier face covering is designed to aid defence against the spread of infection. It makes no assurances that it can prevent transmission or infection of disease or viruses. It is not a medical or clinical face mask and as such should not be used for this purpose, it should not be used under any circumstances where infection level is high and in any exposure to high level heat sources or combustible substances. Remove and do not use mask if you are suffering breathing difficulties or skin irritation.



Date: April 13, 2020

SILVADUR™ 930 Flex Antimicrobial for use in Face Masks

SILVADUR™ 930 Flex Antimicrobial is suitable for treated articles including face masks up to a concentration of 200 ppm Silver active on the treated article.

Thank you for your interest in DuPont Microbial Control products. Please do not hesitate to contact us if we may be of further assistance.

DuPont Contact Center 833-338-7668

 $DuPont^{TM}$, the DuPont Oval Logo, and all products, unless otherwise noted, denoted with TM , SM or $^{\otimes}$ are trademarks, service marks or registered trademarks of affiliates of DuPont de Nemours, Inc. $^{\odot}$ 2019 DuPont de Nemours, Inc. $^{\odot}$ 100 10

Form number: 606-ACC 04.28.20



SILVADUR[™] Treated Articles Dermatological Studies

May 11, 2020

SILVADUR™ Treated Articles Are Neither Irritating or Sensitizing to Humans

A battery of third-party clinical studies was performed on fabric treated with SILVADUR™. These studies were used to evaluate the potential for SILVADUR™ to cause skin irritation or skin sensitization in humans. **These evaluations found** no evidence that SILVADUR when applied to fabrics at up to 10 times higher than recommended levels either irritates or causes sensitization in humans.

21-Day Cumulative Irritation Patch Tests of SILVADUR on Cotton and Polyester Fabrics:

Using 10 times the recommended dosage and use levels, SILVADUR's use in treated articles has proven neither to irritate or cause sensitizations in humans.

These studies evaluated the potential for SILVADUR treated cotton and polyester fabrics to irritate human skin following multiple exposures. The procedures for the two studies were identical in all respects.

- In each case, cotton and polyester fabric squares, moistened with water and treated with SILVADUR at a concentration of 200 ppm silver active and applied directly to the skin of 30 individuals involved in the cotton study and 32 individuals participating in the polyester study.
- · Positive controls were also applied.
- · Twenty-four hours later, the patches were removed and the sites evaluated for skin irritation.
- These procedures were repeated 15 times over a three-week period. The cotton and polyester squares were applied Monday through and left on over the weekend.

Conclusion

Under the conditions of these studies over 21 days, there was no evidence of skin irritation among the participants of the cotton and polyester tests at any observation period.

Human Repeat Insult Patch Tests (HRIPT) of SILVADUR on Cotton and Polyester Fabrics:

These studies evaluated the potential of SILVADUR treated cotton and polyester fabrics to produce skin sensitization, such as contact allergy, on humans following multiple exposures.

The procedures for the two, six-week studies were identical in all respects. In each case, cotton and polyester fabric squares, moistened with water and treated with SILVADUR at a concentration of 200 ppm silver active, were applied directly to the skin of the 106 individuals who completed the cotton study and the 102 participants who completed the polyester study.

Each study was divided into three phases:

- An Induction Phase consisted of nine applications of the test material every Monday, Wednesday and Friday over a three-week
 period. The patches were removed approximately 24 hours after each application. At 48-hour intervals, the skin sites were evaluated
 and identical fresh patches were applied to the same sites.
- · A Rest Phase of 10 to 15 days.
- A Challenge Phase during week six of the study. During this phase, identical patches were applied to sites previously unexposed to the test material. The patches were removed after 24 hours and the sites graded after additional 24-hour and 48-hour periods.

Conclusion

Under the conditions of this study, there was no evidence of skin sensitization among the 106 participants in the cotton study and the 102 participants in the polyester study during any observation period.

SILVADUR™ Is Approved by the International OEKO-TEX® Association

These studies evaluated the potential of SILVADUR treated cotton and polyester fabrics to produce skin sensitization, such as contact The International OEKO-TEX Association assessed and approved SILVADUR as harmless to human health if it is used correctly, according to its operating instructions and product safety standards.

It is also registered with the U.S. Environmental Protection Agency (EPA) and its active ingredient is notified and supported under the EU Biocidal Products Regulation (BPR). SILVADUR components meet REACH requirements in the European Union.





